



Activa Flexi Move



Patented
product!

Simple to
adjust and
reset!
Reaches
longer!

The adjustable mop frame

The adjustable mop frame Activa Flexi Move reaches further, making it simple to clean floors under low furniture without having to bend your back.

- Simple to adjust.
- Simple to reset.
- No accessories required.

When the guider rail is back in its original position, Activa Flexi Move works like any other mop frame.

- 12114** Activa Flexi Move 40 cm
- 12116** Activa Flexi Move 60 cm
- 12118** Activa Flexi Move 75 cm
- 12119** Activa Flexi Move 90 cm



Activa Flexi Move allows easy cleaning below low shelves where it is otherwise difficult to clean.



Simple and easy to use!

1-3. Place your left foot as it is in the picture. Press lightly on the handle to release the springs in the guider rail. Use your right foot to push the guider rail to the right. 4. To move the glider rail back to its original position, use your right foot to push the rail back to the centre.