

WE CARE WE SHARE

NAVISANI® TOILET SEAT



Xiamen Wing Technology Co., Ltd

Tel: 0086-592-5513520

Fax: 0086-592-5511562

Website: www.navisani.com

E-mail: wing@china-wing.com

Office: No.580, Jiahe Road, Huli District, Xiamen, China

Factory: No.228, Jiutianhu Road, Jimei District, Xiamen, China



Company Website

Xiamen Wing Technology Co., Ltd

Specialized In The Public Sanitary Intelligent Toilet Seat


Wing Technology is a highly innovative technical company, providing professional and integrated service on public health solution. We specialized in developing, manufacturing and marketing the hygienic disposable intelligent toilet seats. Our patented NAVISANI intelligent toilet seat is a new conceptual sanitary ware, which will provide the public with a safe, clean and healthy restroom environment. The intelligent seat is ideal for all commercial shared toilet facilities: airports, casinos, hotels, offices, malls, hospitals, clubhouses, restaurants, beauty salons, etc.

Our national patented products and technology possessed more than 30 items and renowned a great honor in this industry. Our quality products have been exporting to more than 60 countries, all over Europe, America, Australia, Africa, Asia, etc. Our domestic partners also covered the major cities in China.

As a global leader of public sanitation product manufacturer, we believe that "profession builds quality, quality brands reputation". We endeavor to persistently innovate and develop Wing's product, so as to reach the acme of perfection of its quality. We remain good faith in keeping responsible and sincere while at the same time providing efficient and professional service.

NAVISANI SEAT

VISIBLE SANITATION

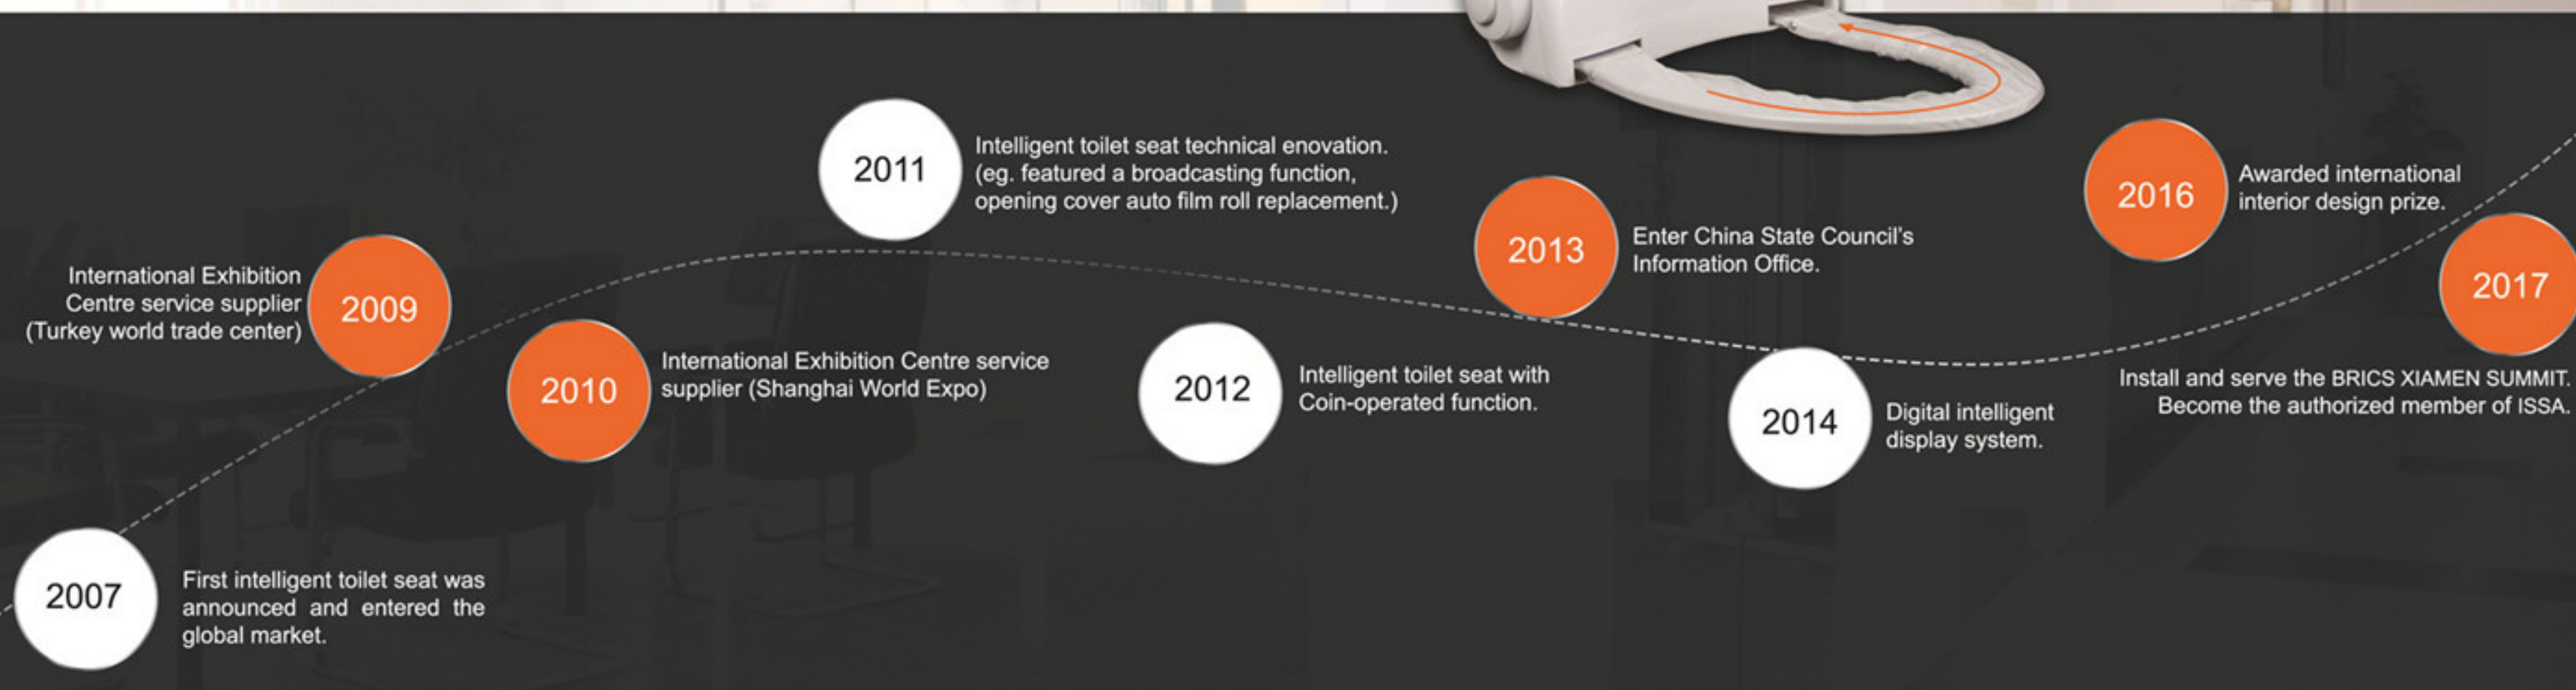

Application Place



When using an ordinary toilet bowl, people must have much concern about the sanitary problems such as piss, scurf & other invisible contaminants.

Using NAVISANI hygienic toilet seat will provide a new toilet seat for your every usage. The visible clean system will effectively prevent cross-infection and provide you with "private bathroom" to ensure comfortable and safe.

Certificate



Operation & Configuration


NAVISANI Toilet Seat Cover is automatically controlled by a build-in microcomputer. The sanitary film will stop after turning exactly one round. The used film will be destroyed by a cutter to ensure one time use.

NS100B

Button Starting
Auto-replacement of Sanitary Film
Applicable Film: NR100 (60-65 Times / Roll)

NS100C

Button & Sensor Starting
Other functions are the same as that of NS100B.

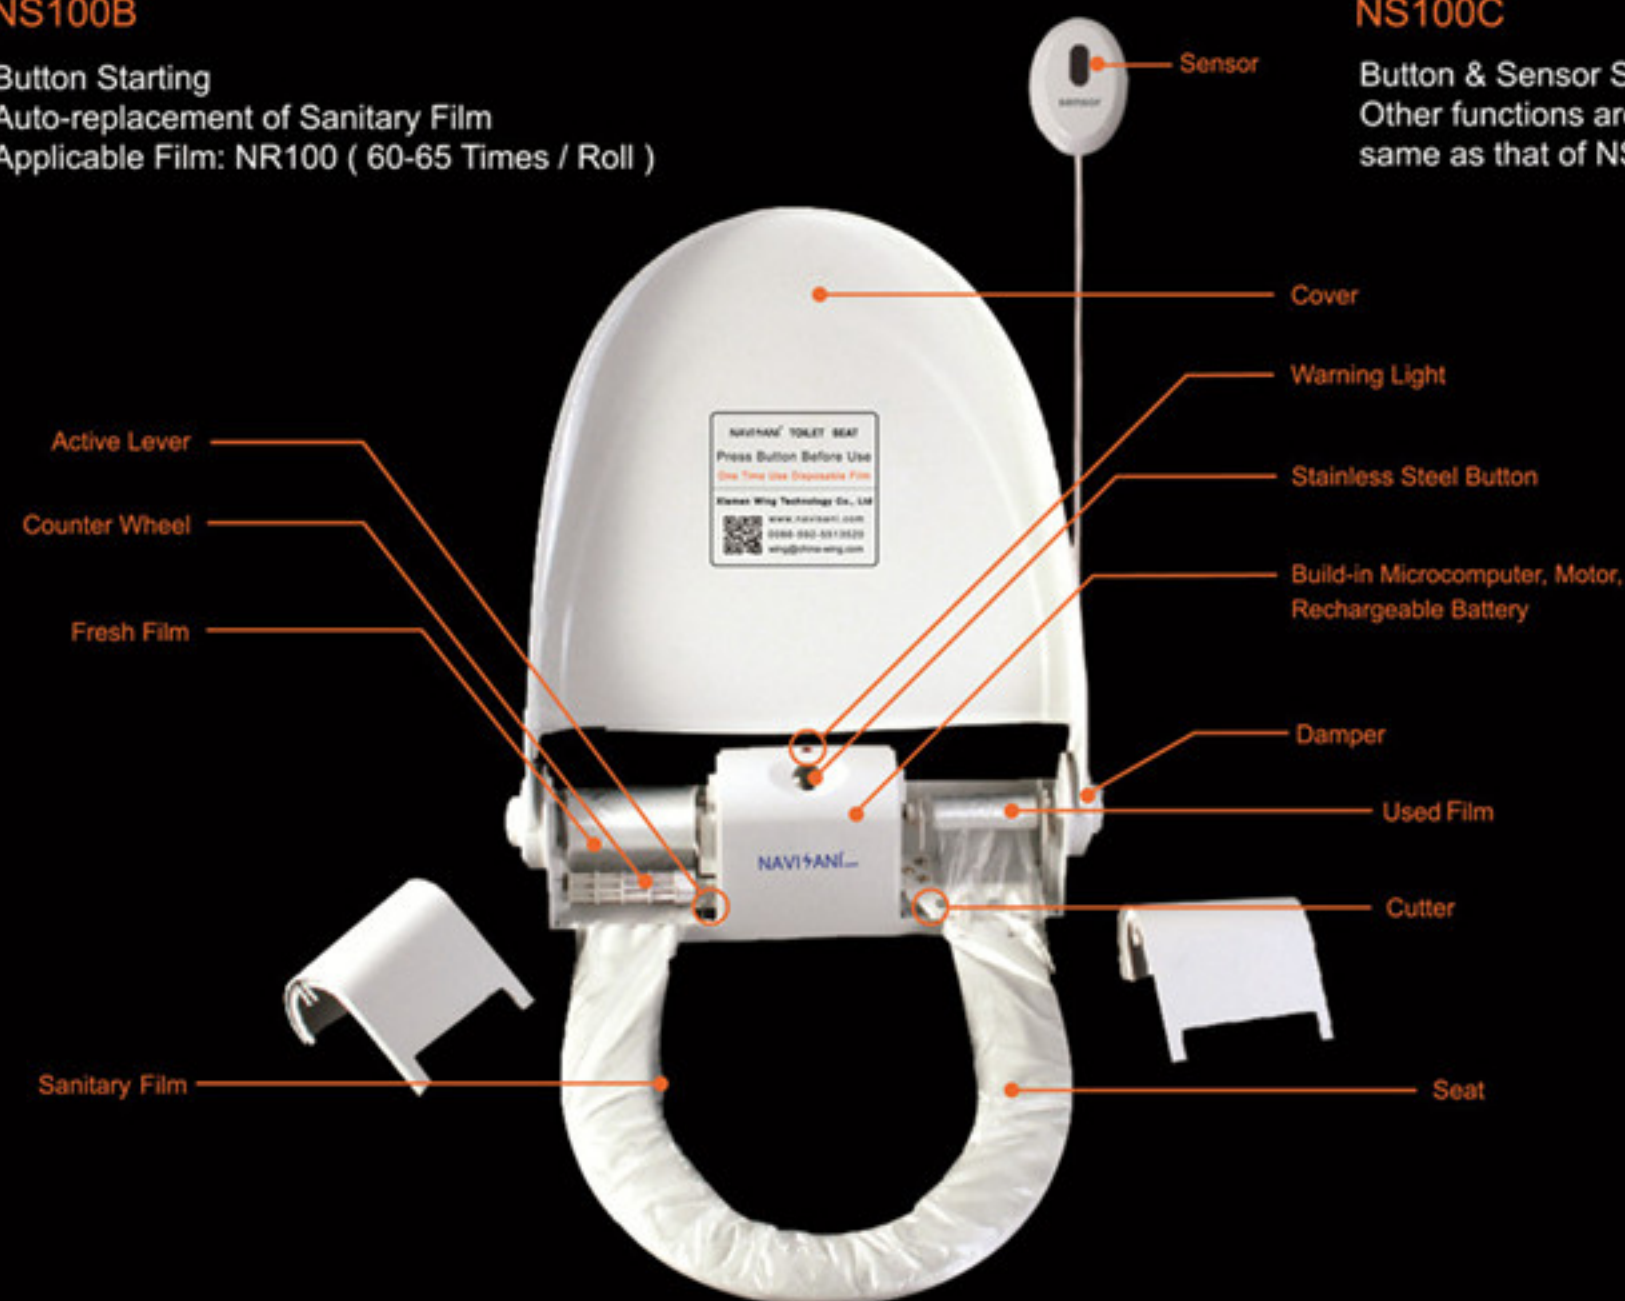

Rechargeable Battery



Installation Accessories



Adapter



Sanitary Film

NS100D / NS100E

NS100D

Heating Function
Button Starting
Auto-replacement of Sanitary Film
Applicable Film: NR100 (60-65 Times / Roll)

NS100E

Button & Sensor Starting
Other functions are the same as that of NS100D.



1. Seat temperature is 38°C, to create a warm & cozy environment in cold weather.
2. Application scope of AC power voltage: 100V-240V.
3. Power Supply: Adapter only, the output voltage is 24V.
4. A switch controller is equipped at the rear cabin, which can be turned off to stop seat heating.
5. Other functions are the same as that of NS100B/NS100C.

NS200B / NS201B



NS201B

No Cover
Button Starting
Auto-replacement of Sanitary Film
Applicable Film: NR200 (130-135 Times / Roll)



NS200B

Button Starting
Auto-replacement of Sanitary Film
Applicable Film: NR200 (130-135 Times / Roll)

Product Structure

NS200C

Button & Sensor Starting
Auto-replacement of Sanitary Film
Applicable Film: NR200 (130-135 Times / Roll)



NS201C

No Cover

The operation and functions are the same as that of NS200C.

NS220B / NS221B

NS221B

No Cover
Raster Reader
Button Starting
Auto-replacement of Sanitary Film
Applicable Film: NR220 (130 Times / Roll)



NS220B

Raster Reader
Button Starting
Auto-replacement of Sanitary Film
Applicable Film: NR220 (130 Times / Roll)

NS220C / NS221C

NS221C

No Cover
Raster Reader
Digital Screen Display
Button & Sensor Starting
Auto-replacement of Sanitary Film
Applicable Film: NR220 (130 Times / Roll)



Display the Rest Using
Times of Sanitary Film,
Battery Volume, etc.

NS220C

Raster Reader
Digital Screen Display
Button & Sensor Starting
Auto-replacement of Sanitary Film
Applicable Film: NR220 (130 Times / Roll)

Other Functions for Choice




Coin-operated Seat

Insert a coin to start
Auto-replacement of Sanitary Film
Applicable to Different Models of Sanitary Film

Hygienic Seat with Audio

Users can hear the music playing when sitting on the seat
Auto-replacement of Sanitary Film
Applicable to Different Models of Sanitary Film

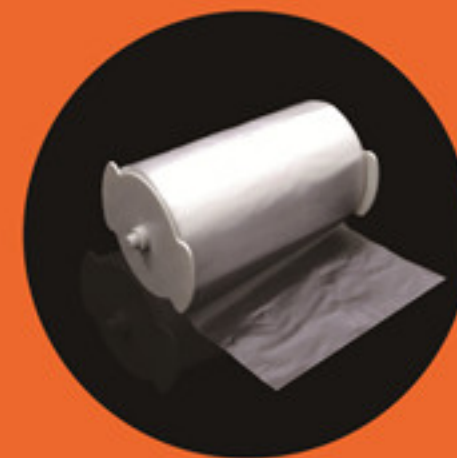

NR100

60-65 Times/Roll
Applicable for NS100 Series



NR200

130-135 Times/Roll
Applicable for NS200/NS201 Series



NR220

130 Times/Roll
Applicable for NS220/NS221 Series

One time film brings visible clean and healthy. It is made of food grade HDPE plastic and has been certified by authoritative organization.

NAVISANI Toilet Seats' Model Description and Comparison(marked *** is available)

Model		Operating Mode				Power Supply		Functions												Applicable Sanitary Film		
		Stainless Steel Button Type			Infrared Sensor Device Type	Rechargeable Battery	Adapter(Scope of AC Power Voltage:100V-240V)		Main Functions						Warning Functions					Type		
		Simple Stainless Steel	Ring Colored LED	Point Colored LED			Adapter	Output Voltage	Automatic Film Replacement	Adjustable Thermostatic Seat	Soft Closing Cover	Digital Counting Display	Raster Reader	Counter Wheel	Overload Protection	Restarting Interval	Low Battery Warning	Counter Fault Warning	Temperature Control	NR100 60-65 Times/Roll	NR200 130-135 Times/Roll	NR220 130 Times/Roll
NS100	NS100B1	*				*	*	7V	*		*			*	*	*	*	*		*		
	NS100B2		*			*	*	7V	*		*			*	*	*	*	*		*		
	NS100B3			*		*	*	7V	*		*			*	*	*	*	*		*		
	NS100C1	*			*	*	*	7V	*		*			*	*	*	*	*		*		
	NS100C2		*		*	*	*	7V	*		*			*	*	*	*	*		*		
	NS100C3			*	*	*	*	7V	*		*			*	*	*	*	*		*		
	NS100D1	*					*	24V	*	*	*			*	*	*		*	*	*		
	NS100D2		*				*	24V	*	*	*			*	*	*		*	*	*		
	NS100D3			*			*	24V	*	*	*			*	*	*		*	*	*		
	NS100E1	*			*		*	24V	*	*	*			*	*	*		*	*	*		
	NS100E2		*		*		*	24V	*	*	*			*	*	*		*	*	*		
	NS100E3			*	*		*	24V	*	*	*			*	*	*		*	*	*		
NS200	NS200B1	*				*	*	7V	*		*			*	*	*	*	*			*	
	NS200B2		*			*	*	7V	*		*			*	*	*	*	*			*	
	NS200B3			*		*	*	7V	*		*			*	*	*	*	*			*	
	NS200C1	*			*	*	*	7V	*		*			*	*	*	*	*			*	
	NS200C2		*		*	*	*	7V	*		*			*	*	*	*	*			*	
	NS200C3			*	*	*	*	7V	*		*			*	*	*	*	*			*	
NS201	NS201B1	*				*	*	7V	*					*	*	*	*	*			*	
	NS201B2		*			*	*	7V	*					*	*	*	*	*			*	
	NS201B3			*		*	*	7V	*					*	*	*	*	*			*	
	NS201C1	*			*	*	*	7V	*					*	*	*	*	*			*	
	NS201C2		*		*	*	*	7V	*					*	*	*	*	*			*	
	NS201C3			*	*	*	*	7V	*					*	*	*	*	*			*	
NS220	NS220B1	*				*	*	7V	*		*		*		*	*	*	*				*
	NS220B2		*			*	*	7V	*		*		*		*	*	*	*				*
	NS220B3			*		*	*	7V	*		*		*		*	*	*	*				*
	NS220C1	*			*	*	*	7V	*		*	*	*		*	*	*	*				*
	NS220C2		*		*	*	*	7V	*		*	*	*		*	*	*	*				*
	NS220C3			*	*	*	*	7V	*		*	*	*		*	*	*	*				*
NS221	NS221B1	*				*	*	7V	*				*		*	*	*	*				*
	NS221B2		*			*	*	7V	*				*		*	*	*	*				*
	NS221B3			*		*	*	7V	*				*		*	*	*	*				*
	NS221C1	*			*	*	*	7V	*			*	*		*	*	*	*				*
	NS221C2		*		*	*	*	7V	*			*	*		*	*	*	*				*
	NS221C3			*	*	*	*	7V	*			*	*		*	*	*	*				*

Product Details



Button

Stainless steel button, waterproof and exceed 200,000 use times.

- A Style 1: Simple Stainless Steel Button (Eg. NS100B1)
- B Style 2: Ring Color Light Stainless Steel Button (Eg. NS100B2)
- C Style 3: Point Color Light Stainless Steel Button (Eg. NS100B3)



Seat

Somatological fit; fully comfortable; 67mm in width.



Heating Function (Only for Heating Models)

When turning on the heating switch, the temperature of the Sensor Heated Toilet Seat will be 38°C, warm and comfortable.



Replacement Warning


A red line will appear when the sanitary film remains 1-2m, it reminds you to replace the film roll.



Charging Ways (Only for Models without Heating Function)

- A Open the white waterproof cap on the back of pedestal, get the battery charged. It is applicable for NS100B/NS100C series.
- B Open the cover of the cabin, open the white waterproof cap and get the battery charged. It is applicable for NS200/NS201/NS220/NS221 series.
- C For NS100B/NS100C Series: Take the seat out, open the battery cover behind the pedestal, pull the red ribbon and take out the battery, then get the battery recharged.

For NS200/NS201/NS220/NS221 Series: Open the cabin, and take out the battery, then get the battery recharged.

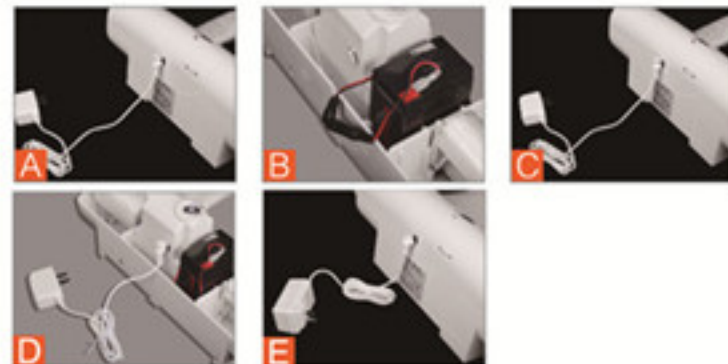

Power Supply

- A/B: Rechargeable battery (Only for Models without Heating Function)
- C/D: For models without heating function: Adapter, Input voltage (100-240V), Output voltage: DC 7V.
- E: For models with heating function: Adapter, Input voltage (100-240V), Output voltage: DC 24V.




Slow Close Cover

Toilet Seat Covers have a damper, which can make it close softly, exceed 50,000 use times.



Digital Screen Display

The screen with sensor function shows the rest using times of sanitary film & the remaining battery volume, etc.
Press the bottom-right button (Mark in Red) for 3 seconds to reset the using times of the sanitary film when replacing the fresh one.

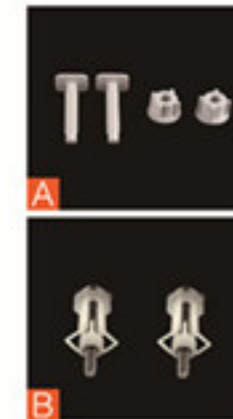

Installation Kit Types

- A: Plastic Nut Kit;
- B: Nylon Expansion Nut Kit;
- Plastic Bolt & Nut is the standard installation Kit.



Battery Types

- A: Lead-acid Battery, 6V, 4.5AH, 4-6 hours for recharging ;
- B: Lithium Battery, 7.4V, 5AH, 3.5-4 hours for recharging;
- Lead-acid Battery is the standard battery type.



Product Details



Microcomputer & indication light


- Overload Warning: The motor will stop working when the changing film encounters unusual resistance force.
- When no loading: counter wheel fault; or the film roller is not installed in place, the LED light will be on all the time.
- When the rechargeable battery is in low position, the LED indicator will flash and the motor will stop working or turn slowly.
- Restarting Intervals: The motor will stop for 6 seconds before restarting to avoid waste.



Microcomputer & indication light

(Only for Heating Models)

- If there is a malfunction with heating device, the LED light will flash in green, and the heating function will stop automatically.
- If there is a malfunction with temperature controller, the LED light will be on, but the heating temperature will not exceed 40 °C to ensure safety.

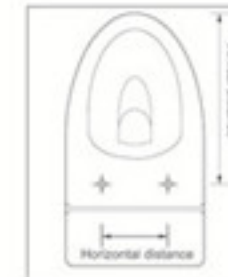

Application Scope

Horizontal distance (For Two Holes on the Toilet Bowl)

NS100 Series:

- Horizontal distance: 130-200mm (Distance between two installation holes)
- Vertical distance: 450-490mm (From center between two installation holes to the top front of toilet bowl)

NS200/NS201/NS220/NS221 Series:

- Horizontal distance: 80-210mm (Distance between two installation holes)
- Vertical distance: 450-480mm (From center between two installation holes to the top front of toilet bowl)

Directory of Some Clients

Bank, Office

Industrial and Commercial Bank of China
Bank of China
Agricultural Bank of China
Huaxia Bank
Industrial Bank
China Minsheng Bank
Information Office of State Council
Istanbul World Trade Center
CNOOC Oil Base Group Ltd
China Mobile Communications Corporation
Shanghai People's Procuratorate
Shanghai Law Society
Shanghai Political Consultative Congress
Vanke Real Estate
Tianjin Ocean Building
Xiamen International Trading Building
China Guo Dian Building
Shanghai Citigroup Tower
Shenzhen Tencent Building
Qingdao International Finance Center
Guangzhou Securities Co., Ltd

University, Hospital

Renmin University of China
Xiamen University
Chinese People's Liberation Army
Command College
Shanghai Police Officer Training Center
The Armed Police Corps Hospital
People's Hospital of Chongqing Banan District
Beijing BAO DAO Healthcare
Nanjing HSCY Women Health Hospital
Chengdu Angel Obstetrics and Gynecology
Hospital
Medical College of Guilin
Fujian Provincial Hospital

Hotel, Restaurant, Entertainment, Leisure Spot

Dolton Resort Hotel
Shanghai Southern Airlines Pearl Hotel
Shenzhen Venice Hotel
Wuhan Grace International Garden Hotel
Chongqing Yongchuan Hotel
Henan Province Xiangji Bird's Nest & Firm & Abalone Chain
Beijing Liangzi Foot Massage Health Care Service
Fuqiao Health Care Chain
Nanjing A Ku KTV Chain
Beauty Farm Beauty Salon Chain
Jourdeness Beauty Salon Chain
LUOLIHFEN Beauty Salon Chain
Chitina Beauty Salon Chain
Hongkong Slim International Group
Golden Time Beauty Salon Chain
BoAo State Guest House

Conference & Exhibition, Airport, Railway Station, Scenery Spot

BRICS XIAMEN SUMMIT
Shanghai World Expo
Beijing Conference Center
Jinan International Conference & Exhibition Center
Wuhan International Conference & Exhibition Center
Zhengzhou Xingzheng International Airport
Nanjing Lukou International Airport
Dalian International Airport
Guiyang International Airport
Shenyang Taoxian Airport
Haikou Meilan Airport
Beijing Railway station
Tianjing Railway station
Haerbin Qiulin International Shopping Mall
Hainan Nanshan Cultural Tourist Attractions



NAVISANI BIDET

Non-electricity Bidet: You don't have to change the facilities in the washroom, just need to install it on your original toilet, and then connect it to the water supply in the bathroom.



NB200A Cold & Hot Water Bidet



NB200B Cold Only Bidet



- Better Personal Hygiene and Cleaning
- Reduce Plumbing Problems and Clogs
- More Effectively Reduce Bacteria Infection
- Save Money and Reduce Household Waste
- Better Skin Care and More Comfortable to Use

